

Quick Start Guide
MINI STOMP



MACROLITE

www.macrolite.store

一、Function Settings

menu	numeric value	description
R255	0-255	Red LED, brightness from dark to bright
G255	0-255	Green LED, brightness from dark to bright
B255	0-255	Blue LED, brightness from dark to bright
FH99	1-99	Strobe, the speed from slow to fast
CL01	1-12	Mixed color combination effect, 12 color selection
CC01	1-36	36 kinds of self-walking effects
SP99	1-99	The speed is adjusted from slow to fast, (press the confirmation button in the CC01 walk menu to enter this menu)
SU01	1-2	Voice control, 1 is sound control mixed color strobe, 2 is sound control jump
A001	1-512	Console mode 1 or the slave mode
d001	1-512	Console mode 2 or the slave mode

MENU is the menu switch key, UP, DOWN are the value switch key, and ENTER is the confirmation key.

二、DMX control

A001 (console mode 1)		
channel	The channel value	functional description
CH1	0	Closed light
	1-255	Total dimming
CH2	0	Red LED-closed light
	1-255	Red LED is from dark to bright
CH3	0	Green LED with closed light
	1-255	Green LED is from dark to bright
CH4	0	Blue LED-closed light
	1-255	Blue light LED is from dark to bright
CH5	0	No flash
	1-255	Strobe from slow to fast (self-travel effect is off)
CH6	0	No self-walking effect
	1-85	Mixed color combination mode, through CH 7 selected 12 mixed color effects
	86-171	Self-walking mode, 36 self-walking modes, and 1-36 self-walking effects were selected through CH 7

	171-255	Voice control mode, select the voice control mode through CH 7
CH7	0-255	Mixed color combination mode: corresponding to 12 color choices
		Self-walk mode: corresponding to 36 color jumps
		Voice control mode: 0-127 is sound control mixed color strobe, 128-255 is sound control mixed color jump
CH8	0-255	When CH 7 chooses the self-walking mode, the control speed is from slow to fast

The d001 (console mode 2)		
channel	The channel value	functional description
CH1	0	Closed light
	1-255	Total dimming
CH2	0	No flash
	1-255	Strobe from slow to fast (self-travel effect is off)
CH3	0	No self-walking effect
	1-85	Mixed color combination mode, through CH4 to select 12 mixed color effects
	86-171	Self-walking mode, 36 self-walking modes, and 1-36 self-walking effects are selected through CH4
	171-255	Voice control mode, select the voice control mode through the CH4
CH4	0-255	Mixed color combination mode: corresponding to 12 color choices
		Self-walk mode: corresponding to 36 color jumps
		Voice control mode: 0-127 is sound control mixed color strobe, 128-255 is sound control mixed color jump
CH5	0-255	When CH3 chooses the self-go mode, the control speed is from slow to fast
CH6	0	Red LED-closed light
	1~255	Red LED is from dark to bright
CH7	0	Green LED with closed light
	1~255	Green LED is from dark to bright
CH8	0	Blue LED-closed light
	1~255	Blue light LED is from dark to bright

PARAMETERS:

Voltage: 110-240v

Power: 55W

Light source: 288 5050RGB 0.6W, 48 5730 white light 0.5W

Operation mode: self-propelled, voice-controlled, master-slave,

DMX512, with RDM, support one-click sending

current channels: A001 11 channels and D001 11 channels are optional

pay attention to

- 1、 Read each item of this manual carefully before installing and using the equipment.
- 2、 It is forbidden to disseminate the contents of this manual with the permission.
- 3、 This manual is for relevant information only and all contents will be changed at any time without notice.
- 4、 Do not modify this equipment unless the instructions specify.

Safety tips

- 1、 Ensure that the power supply of the lamp body is disconnected before installation and service.
Please ensure the ventilation of the surroundings of the light fixtures good.
- 2、 This lamp is designed for indoor demonstration, please do not use this product for a long time in a humid environment.
- 3、 When using and maintaining, the lamp should avoid contact with water droplets. If it is to be used outdoors, please take adequate waterproof measures.
- 4、 The installation, operation and maintenance personnel must be familiar with the performance of the lamp. Most of the damage is caused by the misoperation after not being familiar with the performance. Please use 85~265VAC voltage.
- 5、 Please do not face the light body for a long time, so as not to cause discomfort to the eyes.
6. Please wipe the lamps with clean cloth blocks frequently.



experience the light.

MACROLITE

www.macrolite.store

© MACROLITE is a registered trademark

Document Number 001|Vs1|28.Feb 2026

Specifications subject to change without prior notice.