

Quick Start Guide

ALFIE RING

50W LED Dyeing | Aperture + Laser



MACROLITE

www.macrolite.store

1. IMPORTANT SAFETY



Caution

To reduce the risk of fire or electric shock, do not expose this

appliance to rain and moisture. The apparatus shall not be exposed to dripping or splashing liquids and no objects filled with liquids, such as vases, shall be placed on the apparatus.



Caution

These service instructions are for use by qualified service personnel

only. To reduce the risk of electric shock do not perform any servicing other than that contained in the operation instructions. Repairs have to be performed by qualified service personnel.

1. Open-package Inspection

When you receive the product, please check whether the product is damaged during transportation, and verify that the master case includes the following parts:

Moving Head light: 1 pc
Signal cable: 1 pc
User's manual: 1 pc

For reasons of safety and approval (CE), any personal reconstruction and/or modification of this product is prohibited. Please note that damage caused by modifications performed manually to this device is not covered by the warranty.

This product leaves our factory in perfect condition. Please follow all notes in these operating instructions to maintain this condition and ensure the safe operation of the product.

Any damage caused as a result of non-compliance with these operating instructions voids the warranty. The manufacturer does not accept liability for

damage to property or personal injury resulting from improper handling or failure to observe these instructions.

Store these operating instructions in a safe place for later reference, and pass them to any new holder when selling, lending, or transferring this device to another party.

2. Instruction


This product is a lighting effect that creates special light effects with one lamp. To generate these effects, the product must be connected to mains and a DMX-512 compatible controller.

This product is designed for 110–220V, 50/60Hz A/C operation and exclusively for indoor use.

If used for any purpose other than those described in these operating instructions, the device may suffer damage and the warranty becomes void. Any other use involves risks such as short circuits, electric shock, etc.

3. Safety and Maintenance:

- Indoor use only
- Make sure the equipment load-bearing structures can withstand more than 10 times the weight of the fixture when installed above ground.
- Disconnect from power supply before replacing lamp, fuse, or other accessories.
- Operate only under electrical standards with leakage protection device A/C.
- Allow the unit to cool down for 15 minutes before replacing lamps.
- Do not use accessories or parts from other companies.
- Contact your specialized dealer for any technical problems.



Please read this manual carefully before operating this product.

2. OVERVIEW

The 50W LED Dyeing combines power, precision, and color in a compact design — perfect for stages, clubs, events, and audiovisual productions.

It features a high-intensity 6*8W RGBW LED as the main beam, complemented by a multi-color LED ring, delivering a sharp light output and one green laser.

With 540° PAN and 180° TILT movement, the unit offers full control through DMX512 (13/17 channels) or in

Auto, Sound, and Master/Slave modes.

The LED display with four control buttons allows easy access to settings such as sound sensitivity, motor inversion, speed, Infrared remote control, bee eye, and strobe adjustments.

Powerful, fast, and versatile — this moving head is built to deliver a professional visual impact, whether used in fixed installations or mobile setups.

Contents of the carton

- 1 × Moving Light
- 1 × Mains Lead
- 1 × User Manual
- 1 × Hanger

Specifications:

- **Power supply:** 110–220V, 50/60Hz
- **Power consumption:** 50W
- **Parameters:** 6PCS 3535 8W RGBW lamp
50 mW green laser,
20 magic soft light strips
- **Dimmer/Strobe:** Electronic 0–100%,
1–20/s
- **Play mode:** Auto, sound, M/S,
DMX512 (13/17 CHs)
- **Display:** 4-button menu system, LED display making it easy to navigate
- **DMX cable:** 3-pin XLR DMX connectors
- **Power cable length:** 1.2m (IEC)
IEC Output ternary power supply
- **Effect:** Pixel control of each LED, fast moving beams and color changes create the ultimate visual effect

3. DISPLAY INSTRUCTION:

Access control panel functions using the four panel buttons located directly underneath the LED Display.

BUTTON	FUNCTION
<MENU>	Used to access the menu or to return to a previous menu option
<UP>	Scrolls through menu options in ascending order
<DOWN>	Scrolls through menu options in descending order
<ENTER>	Used to select and store the current menu or option within a menu

When a menu function is selected, the display will show immediately the first available option for the selected menu function; to select a menu item, press "ENTER".

4. DISPLAY MENU

LCD Menu Instruction

one-level menu	two stage menu	three-level menu	select scope	function description
d001			001-512	DMX address code Settings
NAFA	Fast			Fast self-propelled mode
	Nsts	Srun		Voice-activated mode
	Nstc	Crun		Independent walking mode
	Slav	Son		From the machine mode
	Nasl	Slow		Slow self-propelled mode
Pan			Pan	The level is positive
			rPan	The horizontal is reversed
Til			Til	Vertical forward
			rTil	Vertical reverse
dis			dis	The display is positive
			rdis	Display reverse
18CH			13CH	13 channel mode
			17CH	17 channel mode
PR54			PR54	The horizontal setting is 540 degrees
			PR36	The level is set at 360 degrees
			PR18	The horizontal setting is 180 degrees
Ti27			Ti27	Set vertically at 270 degrees
			Ti18	Set vertically at 180 degrees
			Ti09	Set vertically at 90 degrees
Rest				Light fixture reset
Load				factory data reset

Press the ENTER key for 2 seconds to enter the hidden menu

Pan-	P000-255	Level fine-tuning Settings
Til-	T000-255	Vertical fine-tuning Settings
LiN-	L000-255	Adjust the bee eye Settings
Red-	R000-255	Red current setting
Gre-	G000-255	Green current Settings
Blu-	B000-255	Blue current Settings
Whi-	W000-255	White current Settings

5. DMX CHANNELS

13/17 Channels

13 CH	VALUE	FUNCTION
CH1	0-255	Horizontal axis operation 0°-540°
CH2	0-255	Vertical axis operation 0°-270°
CH3	0-255	The horizontal/vertical speed is fast or slow
CH4	0-255	The total light is adjusted linearly from dark to bright
CH5	0-255	The flashing speed is from slow to fast, 1-20Hz
CH6	0-255	The brightness of the red LED is linearly adjusted from dark to bright
CH7	0-255	The brightness of the green LED is linearly adjusted from dark to bright
CH8	0-255	The brightness of the blue LED is adjusted linearly from dark to bright
CH9	0-255	The brightness of the white LED is linearly adjusted from dark to bright
CH10	0-255	The brightness of the green laser is adjusted linearly from dark to bright
CH11	000-012	NF
	013-021	The light strip is red
	022-030	The light strip is green
	031-039	The light strip is blue
	040-048	The light strip is yellow
	049-057	The light strip is purple
	058-066	The light strip is blue
	067-075	The light strip is white
	076-255	31 kinds of lamp strip flow effect
CH12	000-255	The speed of the light strip increases from slow to fast
CH13	0-149	NF
	150-200	Wait 2 seconds for the lamp to reset
	201-255	NF
17 CH		
CH1	0-255	Horizontal axis operation 0°-540°
CH2	0-255	Level fine-tuning
CH3	0-255	Vertical axis operation 0°-270°
CH4	0-255	Vertical fine-tuning
CH5	0-255	The horizontal/vertical speed is fast or slow
CH6	0-255	The total light is adjusted linearly from dark to bright
CH7	0-255	The flashing speed is from slow to fast, 1-20Hz
CH8	0-255	The brightness of the red LED is adjusted linearly from dark to bright
CH1	0-255	Horizontal axis operation 0°-540°
CH2	0-255	Level fine-tuning
CH3	0-255	Vertical axis operation 0°-270°
CH4	0-255	Vertical fine-tuning
CH5	0-255	The horizontal/vertical speed is fast or slow

5. DMX CHANNELS

CH6	0-255	The total light is adjusted linearly from dark to bright
CH7	0-255	The flashing speed is from slow to fast, 1-20Hz
CH8	0-255	The brightness of the red LED is adjusted linearly from dark to bright
CH9	0-255	The brightness of the green LED is linearly adjusted from dark to bright
CH10	0-255	The brightness of the blue LED is linearly adjusted from dark to bright
CH11	0-255	The brightness of the white LED is linearly adjusted from dark to bright
CH12	0-255	The brightness of the green laser is adjusted linearly from dark to bright
CH13	000-012	NF
	013-021	The light strip is red
	022-030	The light strip is green
	031-039	The light strip is blue
	040-048	The light strip is yellow
	049-057	The light strip is purple
	058-066	The light strip is blue
	067-075	The light strip is white
	076-255	31 kinds of lamp strip flow effect
CH14	000-255	The speed of the light strip increases from slow to fast
CH15	0-7	Channels 7-10 are valid
	8-231	Color combinations
	232-255	Color jumps
CH16	0-7	Channels 1-15 are valid
	8-63	Fast self-propelled mode
	64-127	Slow self-propelled mode
	128-191	Voice control mode 1
	192-255	Voice-activated mode 2
CH17	0-149	NF
	150-200	Wait 2 seconds for the lamp to reset
	201-255	NF

6. IMPORTANT

SETUP

Disconnect the power cord before replacing a fuse and always replace with the same type fuse.

Fuse replacement

With a flat head screwdriver wedge the fuse holder out of its housing.

Remove the damaged fuse from its holder and replace with exactly the same type of fuse.

Insert the fuse holder back in its place and reconnect power.

The fuse is located inside this compartment, remove using a flat head screwdriver.

Fixture Linking

You'll need a serial data link to run light shows of one or more fixtures using a DMX512 controller or to run synchronized shows on two or more fixtures set to a master/slave operating mode.

The combined number of channels required by all fixtures on a serial data link determines the number of fixtures that the data link can support.

Important: Fixtures on a serial/data link must be daisy chained in one single line.

Maximum recommended serial data link distance: 100 meters (1640 ft.)

Maximum recommended number of fixtures on a serial data link: 32 fixtures.

Data Cabling


To link fixtures together you must use data cables.

If you choose to create your own cable, please use data grade cables that can carry a high-quality signal and are less prone to electromagnetic interference.

Cable Connectors

Cabling must have a maleXLR connector on one end and a female XLR connector on the other end.

DMX connector configuration

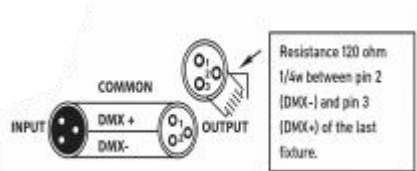

Termination reduces signal errors. To avoid signal transmission problems and interference, it is always advisable to connect a DMX signal terminator.

Caution

Don't allow contact between the common and the fixture's chassis ground. Grounding the common can cause a ground loop, and your fixture may perform erratically.

Test cables with an ohm meter to check correct polarity and to make sure the pins are not grounded or shorted to the shield or each other.

Setting up a DMX Serial Data Link

1. Connect the (male) 3-pin connector side of the DMX cable to the output (female) 3-pin connector of the controller.

6. IMPORTANT

2. Connect the end of the cable coming from the controller, which will have a (female) 3-pin connector, to the input connector of the next fixture consisting of a (male) 3-pin connector.
3. Then, proceed to connect from the output as stated above to the input of the following fixture, etc.

returned, it is important that the fixture be returned in the original factory box and packing.

Sound Activated Mode

The unit responds to sounds picked up by the built-in microphone to create a light show.

The sound changes the color and the position of the effect.

This mode enables the unit to act as a Master to other Slave units.

Built-in Program Mode

As the unit can be mounted hung on a truss system or stand on a flat surface, pan, tilt and LED display settings can be reversed to provide correct coverage and ease of use.

Unpacking Instructions

Immediately upon receiving a fixture, carefully unpack the carton and check the contents to ensure that all parts are present and have been received in good condition.

Notify the freight company immediately and retain packing material for inspection if any parts appear to be damaged from shipping or the carton itself shows signs of mishandling.

Keep the carton and all packing materials.

In the event that a fixture must be



experience the light.

MACROLITE

www.macrolite.store

© MACROLITE is a registered trademark of La Polla S.A.
Document Number 001 | Vs1 | 30. Oct 2025
Specifications subject to change without prior notice.